

# Non-Sterile Gowning Procedure



**1** Don two pairs of cleanroom gloves, placing the second pair over the first pair.



**2** Don bouffant hair cover and a pair of shoe covers prior to entering the controlled environment or outer corridor.



**3** Enter the change room across tacky mat or other debris control mat taking at least three steps with each foot.



**4** Select proper size garments (hood, boots, coverall & goggles)



**5** Remove hood from packaging making sure that the I.D. label is on the inside. Don hood. Adjust the hood for a comfortable, yet snug fit using the adjusting snaps.



**6** Remove coverall from package. Grasp coverall by the garment to unfold, yet not to touch the ground. Unzip coverall.



**7** Grasp right cuff to bottom right of zipper and left cuff to bottom left of zipper. Gather coveralls upper torso and step into the coverall.



**8** Tuck in the hood. Completely zip up all zippers. Snap the collar and anklets of coverall (if applicable).



**9** Roll down donning gloves slightly to expose cuff. Snap cuffs of coverall (if applicable). Place cleanroom working gloves over or under the cuff depending on your requirement.



**10** Remove boots from package and don the first boot. Snap upper leg and buckle straps as needed. Swivel that leg to the clean zone without making contact with the top of the bench (if applicable). Don second the second boot. Swivel that leg to the clean zone without making contact with the top of the bench (if applicable).



**11** Don goggles. Place goggles so they cover the exposed eye area.



**12** Use a mirror to check proper gowning. Discard donning gloves and enter the cleanroom.

# Non-Sterile De-Gowning Procedure



**1** Sit on the bench. Swivel both legs over to the entry zone without making contact with the top of the bench.



**2** Remove goggles. Remove boots one at a time without letting the tops touch the step or floor areas.




**3** Continue to use a bench to avoid accidental contact with the floor and remove your coverall.



**4** Grasp cuffs to waist and remove the coverall.




**5** If you do not intend to re-don the same garment, place the garment in the appropriate receptacle for reprocessing.

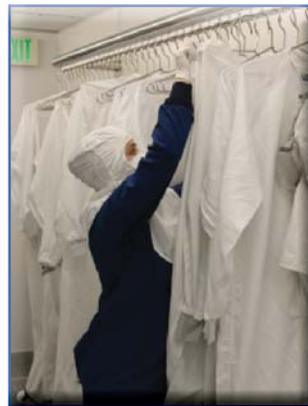

**6** If garments are to be re-donned, garments must be hung or stored in a controlled environment.



**7** If coverall is hung snap both boots to the back of your coverall legs so the boot tops do not come in contact with the floor.

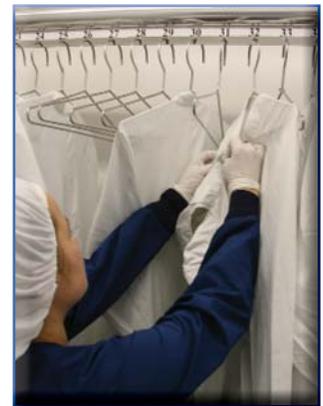

**8** Remove hood and snap it to the sleeve or neck opening.



**9** Hang goggles on hanger or on front snap of coverall. Garment bags may also be used for storage.



**10** Exit the change room then dispose of bouffant hair cover, shoe covers appropriately.



**11** End Result. Proper storage configuration for reuse.

Ask your PCS professional for a copy of our Gowning and De-Gowning Video.

